


## Application 適用車型

Volkswagen Tiguan MK1 '07-16

## Components 內含配件

① Strut Brace 引擎室拉桿總成 1PCS

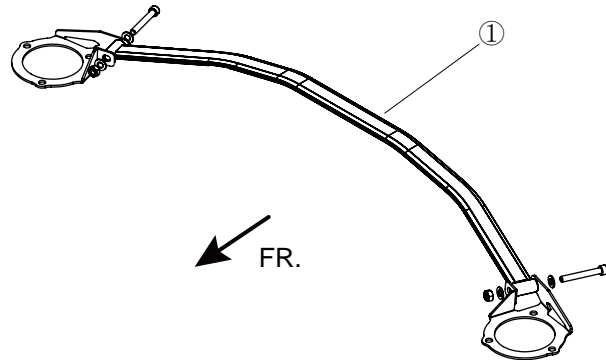

## Caution 注意事項

- Installation should be performed by licensed mechanics with necessary skill and tools to ensure safety.
- Before installation, be sure to note the routing, position of all wires and cables. Please refer to factory manual for proper installation.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行，以確保安全。
- 安裝前請記下線路安裝路徑及位置，請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. With the vehicle on a level surface, remove the wiper arms, cowl panel, plastic cover above passenger side strut mount and the nuts on both sides.

將車輛停放在平地，接著拆卸雨刷臂、雨刷蓋板、副駕駛座側上座上方的塑膠蓋以及兩側避震器上座的六個螺帽。



2. Position ① Strut brace over the mounts and tighten the nuts back.

將 ①引擎室拉桿 放置在避震器上座並鎖回上座螺帽。



3. Install the plastic cover, cowl panel and wiper arms.

裝回塑膠蓋、雨刷蓋板及雨刷臂。

