


Application 適用車型

Volvo V60 '10-18

Components 內含配件

① Middle lower brace 中下結構桿 1PCS

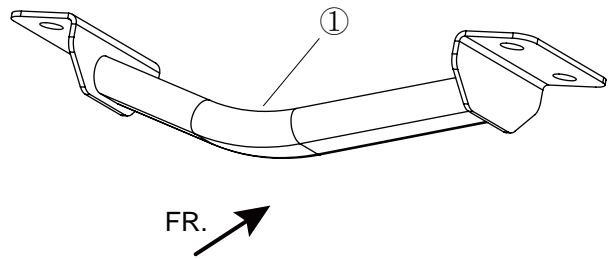

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格之專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle and then remove the four bolts from the middle of the vehicle. (See figure 1)
將車輛升起後拆卸固定於車身中段的四個螺絲。(請參照圖表一)



2. Attach ① Middle lower brace on to the vehicle. Once in place, reinstall the original bolts to secure the brace. (See figure 2)
將 ① 中下結構桿 裝上車輛，完成後沿用原螺絲將拉桿鎖上車身。(請參照圖表二)



Illustration of installed state
完成示意圖

