

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#8985

Application 適用車型

Lexus RX200T '15-present

Components 內含配件

①	Brace 結構桿	
	Cross bar 中間桿	1pcs
	Bracket-RH 支架-右	1pcs
	Bracket-LH upper 支架-左上	1pcs
	Bracket-LH lower 支架-左下	1pcs
②	Bolt 螺絲 (M10x1.5x60)	2pcs
③	Bolt 螺絲 (M8x1.25x20)	1pcs
④	Bolt 螺絲 (M6x1.0x25)	1pcs
⑤	Bolt 螺絲 (M6x1.0x20)	3pcs
⑥	Nut 螺帽 (M10x1.5-17x10)	2pcs
⑦	Nut 螺帽 (M8x1.25-12x7.5)	2pcs
⑧	Nut 螺帽 (M6x1.0-10x6-2)	1pcs
⑨	Nut plate 螺帽鎖片	1pcs
⑩	Washer 華司 (20.8x10.7x2)	4pcs
⑪	Washer 華司 (16x8.4x1.4)	3pcs
⑫	Washer 華司 (12.3x6.5x1.5)	5pcs

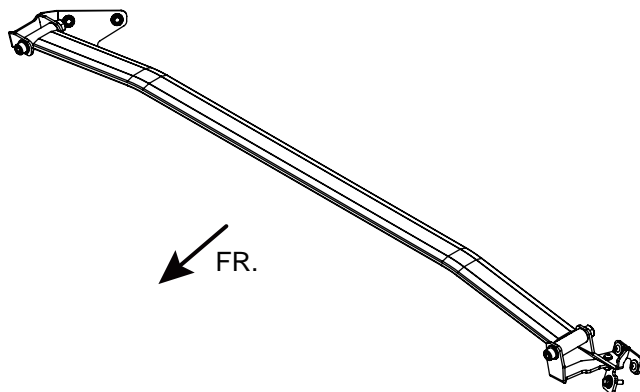

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove brake fluid reservoir bolts and move the reservoir aside to access the reservoir bracket.
拆卸固定剎車油壺的螺絲後將油壺移至一旁，找到位於下方的油壺支架。
2. Install Bracket- LH upper and Bracket- LH lower to the reservoir bracket using supplied M6 bolts, nuts and washers.
(See figure 1)
使用M6螺絲、螺帽及華司，將支架-左上及支架-左下安裝至剎車油壺支架。(參考圖表一)
3. Install Bracket-RH. to right strut tower using supplied M8 bolts, nuts and the nut plate. (See figure 2)
使用M8螺絲、螺帽及螺帽鎖片將支架-右安裝至右側避震塔。(參考圖表二)
4. Install Cross bar to the brackets on both sides using supplied M10 bolts, nuts and washers.
使用配件 M10螺絲、螺帽及華司將中間桿安裝於兩側支架上。
5. Reinstall brake fluid reservoir.
將剎車油壺裝回油壺支架。

Illustration of installed state
安裝完成示意圖

