

# Installation Instructions

## 安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#8964

### Application 適用車型

Volkswagen Tiguan MK2 '16-present

### Components 內含配件

- |                           |      |  |
|---------------------------|------|--|
| ① Brace 結構桿               |      |  |
| Cross bar 中間桿             | 1pcs |  |
| Bracket-RH 支架-右           | 1pcs |  |
| Bracket-LH 支架-左           | 1pcs |  |
| ② Bolt 螺絲 (M10x1.5x60)    | 2pcs |  |
| ③ Nut 螺帽 (M10x1.5-17x10)  | 2pcs |  |
| ④ Washer 華司 (20.8x10.7x2) | 4pcs |  |

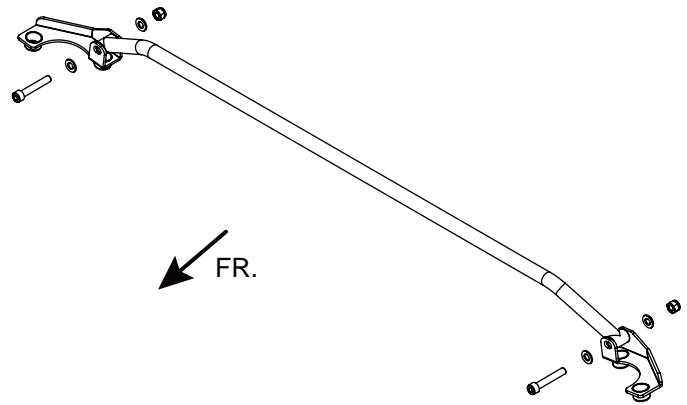

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

### Instructions 安裝說明

1. Remove wiper arms and cowl panel to access strut towers.  
拆卸兩刷臂以及兩刷蓋板後即可找到避震塔。
2. Remove the rearmost and outermost bolts on both side of strut towers, but do not remove the forwardmost ones.  
(See arrows in figure 1)  
拆卸兩側避震塔上最靠後及外側的螺絲。但請勿鬆開最靠前的螺絲。  
(參考圖表一箭頭)
3. Place supplied brackets of the brace over the studs on strut towers, then reinstall the nuts to secure the brackets.  
將配件 桿身支架 安裝至避震塔上的螺絲。並鎖回螺帽以將支架固定。
4. Install Cross bar to the brackets on both sides using supplied 2.bolts, 3.nuts and 4.washers.  
使用配件 2.螺絲、3.螺帽及 4.華司 將 中間桿 安裝於兩側支架上。
5. Reinstall cowl panel and wiper arms.  
將兩刷蓋板及兩刷臂裝回車輛。



Illustration of installed state  
安裝完成示意圖